



# Mighty Crown Install Guide

## Subframe

Composite Decking needs joist support at least every 300 mm and must be raised above the ground at least 30 mm but ideally 100 mm to allow for airflow under the decking

When building your subframe and installing your decking ensure you allow for-

Board size – check the length & width of your boards

Spacing in between your boards ( T-clips 6 mm SS Clips 3 mm)


Spacing at the end of every board and your end to ends (This is extremely important as composite decking expands in heat and contracts in cold.)

Double Joists and 4 full clips for joining boards.

If using bullnosed boards to create a boarder add extra joists / noggins on the left and right and also allow for the lip of the bullnosed edge to protrude over the fascia boards.

Use weed block on the ground to help prevent weeds growing up through your decking

If using a timber subframe use **decking joist tape** on the top to stop rot and moisture because the tape is black it also means the spaces are hardly seen.

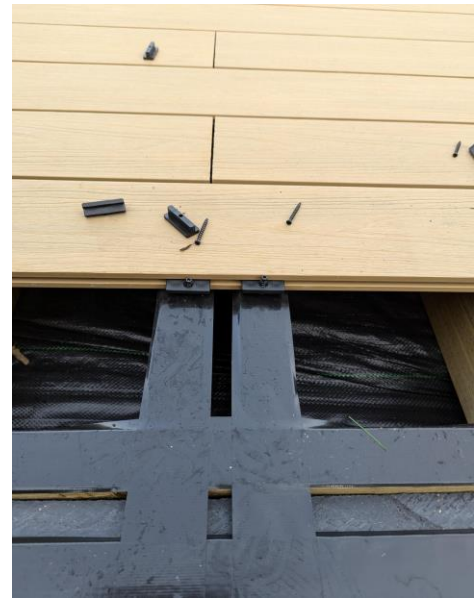

## Starter Clips

Use starter clips when you do not have another board at the other side to join to -ie -if starting from a wall and for bullnosed boards on your left and right sides

Place the starter clip flat side down and screw to secure to joist minimum every 500 mm on the frame and each end of board (minimum 20 mm from the end) When all the necessary starter clips are in place push the board into position making sure the hook on the clip goes into the channel profile on the side of the board. Position the deck board tight against the starter clips.




## Installing Boards

There are many types of composite decking and for most of them the shade of colour will vary to create a natural look. Shuffle in the variants as you install so they will look fabulous from installation , through the weathering process and lifetime.

### Installing boards with T Clips.

Loosely screw your T clips against the bottom lip on the front side of the deck board into every joist, push enough to ensure the board is straight and just tight enough to keep the board in place. Push another deck board tightly against the front T clips and attach T clips against the bottom lip on the front side of the new deck board, then fully tighten the previous row. Add another deck board and repeat the process, until the end of the deck. Make sure you have clips at every joist and all board ends have gaps and 2 x clips.

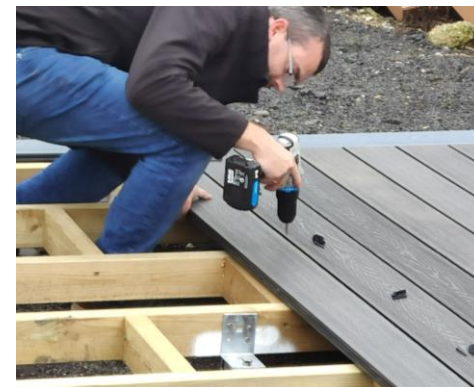

### Installing boards with SS Clips (Stainless Steel Clips)

Slip the 2 x pronged side of the clip under and into the bottom lip of the channel of the front side of the deck board and secure by using a minimum 20 mm screw. Repeat on every joist pushing the board forward enough to ensure the board is straight and firm enough to keep the board in place. Push your next deck board into the clips you have just secured so the new board channel slots into the clip. Add another row of clips and keep repeating the process until complete.

Make sure you have clips at every joist and all board ends have expansion extension gaps and 2 x clips.



### **Bullnosed Boards Install**


Secure starter clips along the edge of your decking subframe, every 300 mm and place the board in position ensuring the starter clip slots are in the groove underneath. Once in place use your decking clips to secure the grooved edge of the decking to the subframe.



### **Fascia Board Install**

Drill pilot holes then create oval shape holes ( to allow for expansion and contraction ) every 500 mm and 10 to 20 mm from each end. Position board and use coloured pan head screws through these holes to secure onto the face of the subframe.

If you are using deck boards as fascia boards you can either slot caps into the ends of the boards or mitre the ends.

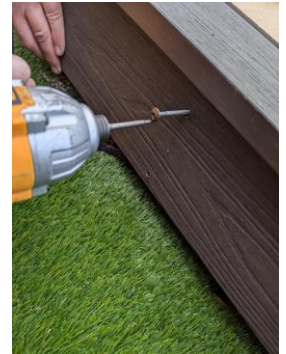

### **Edge Cover Install**

Edge Covers can be used to cover any external 90 degree profile Cut to size with square ends or mitred ends Check sizes are correct by laying in position, if good then remove trim. Run a small bead of exterior grade adhesive down the centre of the backside of the trim but not too much that it squeezes out, then carefully position the trim. We do also advise that you first drill pilot holes then create oval shape holes ( to allow for expansion and contraction ) every metre and 30 mm from each end. Position and use coloured pan head screws through these holes to secure onto the face of the subframe as an added measure.

## **Important**

### **Composite Products expand in the heat & contract in the cold!!!**

In warm and hot weather avoid the boards heating up before you install them by keeping them in the shade or covering them up. If you forget to do this your boards may have already expanded so you will need to push boards tight against the clips and reduce the spacing at the end of the boards.

### **Use clips provided and ensure you leave spaces at BOTH ends of every board.**

Do not screw directly through your composite!! Not only will it spoil the look it may cause the boards to split when they are contracting and expanding. For Fascia boards & Edge covers create oval shape holes & use pan head screws as above .

Please note that Kent Decking Supplies are suppliers only & hold no responsibility for installations. For the warranty it is the responsibility of the "property holder" to ensure products are installed following the guide.